


# Limit pull belt assembly

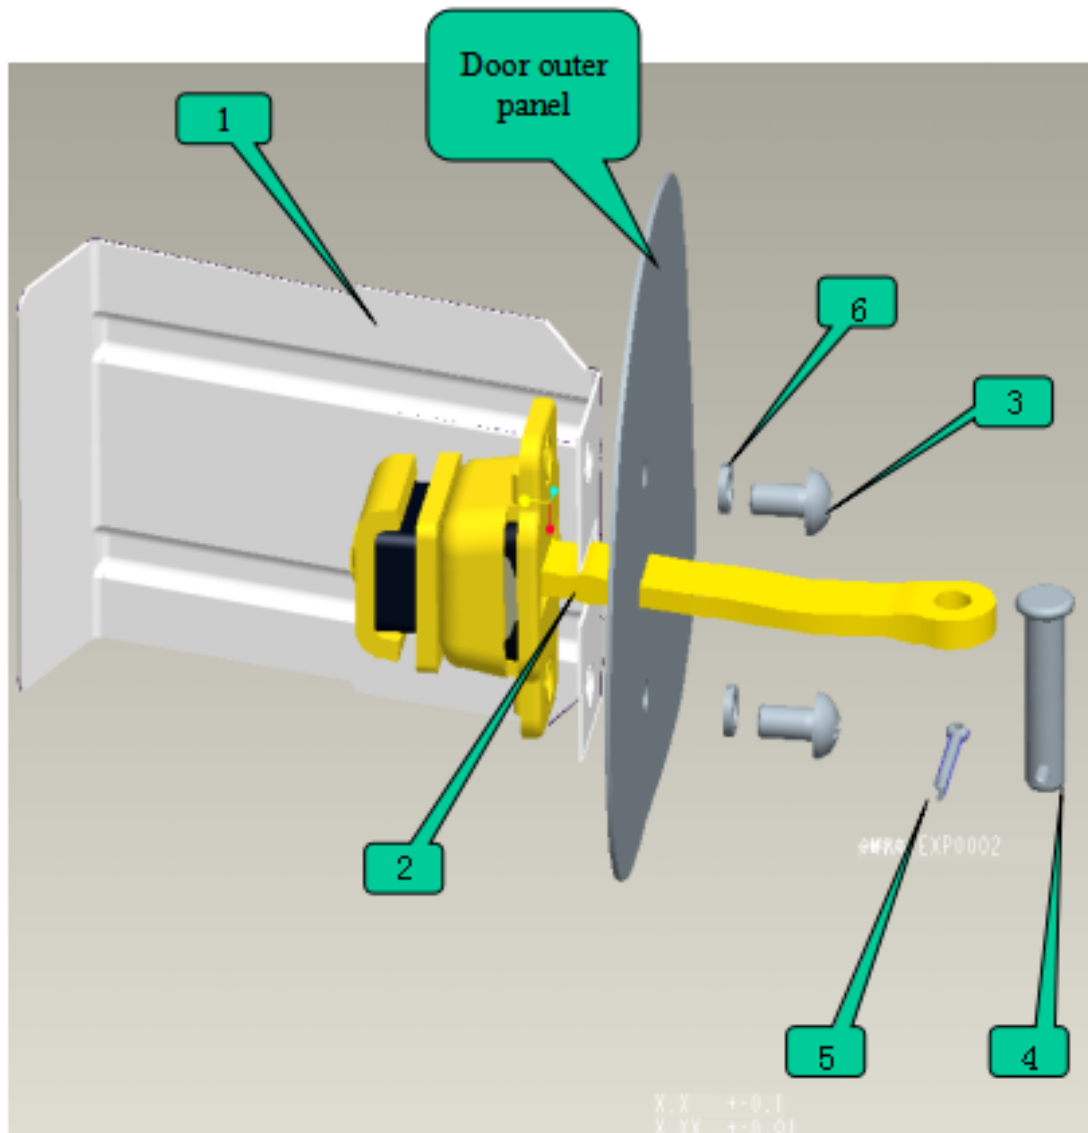

No	Parts number	Parts name	Quantity
1	AZ1642340027	Limit pull strap fixing plate	2
2	AZ1642340026	Limit pull belt assembly	2
3	Q2140612	screws	4
4	Q5100835	Pin	2
5	Q8002526	Cotter pin	2
6	Q40306	Spring washer	4

## Process content:

- 1 Pull the limit plate and the limit band Assembled to the outer panel of the door;
- 2 Fix the assembled limit strap to this Body