


Door lock assembly II

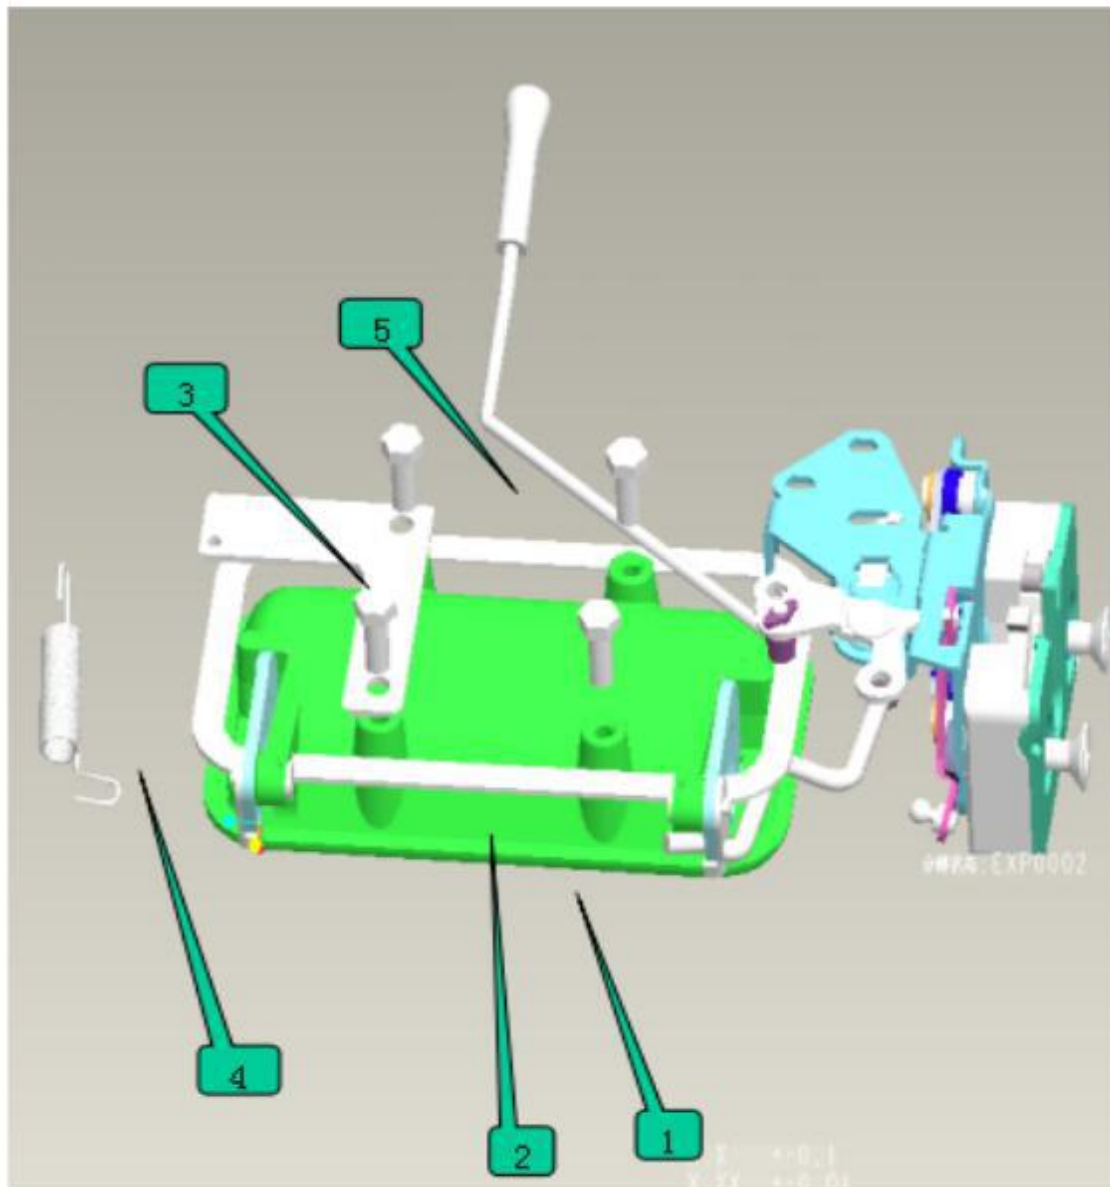

No	Parts number	Parts name	Quantity
1	AZ1642340001	Door handle assembly	2
2	AZ1642340002	Gasket	2
3	AZ1642340005	External handle fixed angle plate	2
4	AZ1642340006	Outer handle spring I	2
5	Q150B0616	bolt	8

Process content:

- 1 Place the rubber gasket on the outer surface of the outer panel of the door and assemble the outer handle assembly;
- 2 Connect the lever II to the outer handle assembly before fixing the bolt;
- 3 Install spring I.