

## Description

1. When assembling the inner handle, first install AZ1642340033—open the handle inside, screw on the screw, and finally open the handle cover in AZ1642340032.
2. When assembling the lifter handle, first install Q43107 - the shaft with the elastic retaining ring, the rear buckle upper handle cover.