



NO	Parts Number	Parts name	Quantity
1	AZ164216001 0	Front seal	1
2	AZ164216018 1	Floor bracket	1
	Q1460620	Combination bolt	8
3	Q39748202	Reed nut	3
4		Air pressure sensor bracket	1
	Q150B0616	bolt	2
	Q40306	Spring washer	2

Note: When the front sealing strip is installed, remove the protective paper and stick it on the horizontal surface behind the front lower window. The distance from the wind window stop shall not affect the installation of the front windshield sealing strip. In actual operation, a front windshield seal can be stuck first, and then used as a master.