


# Film installation

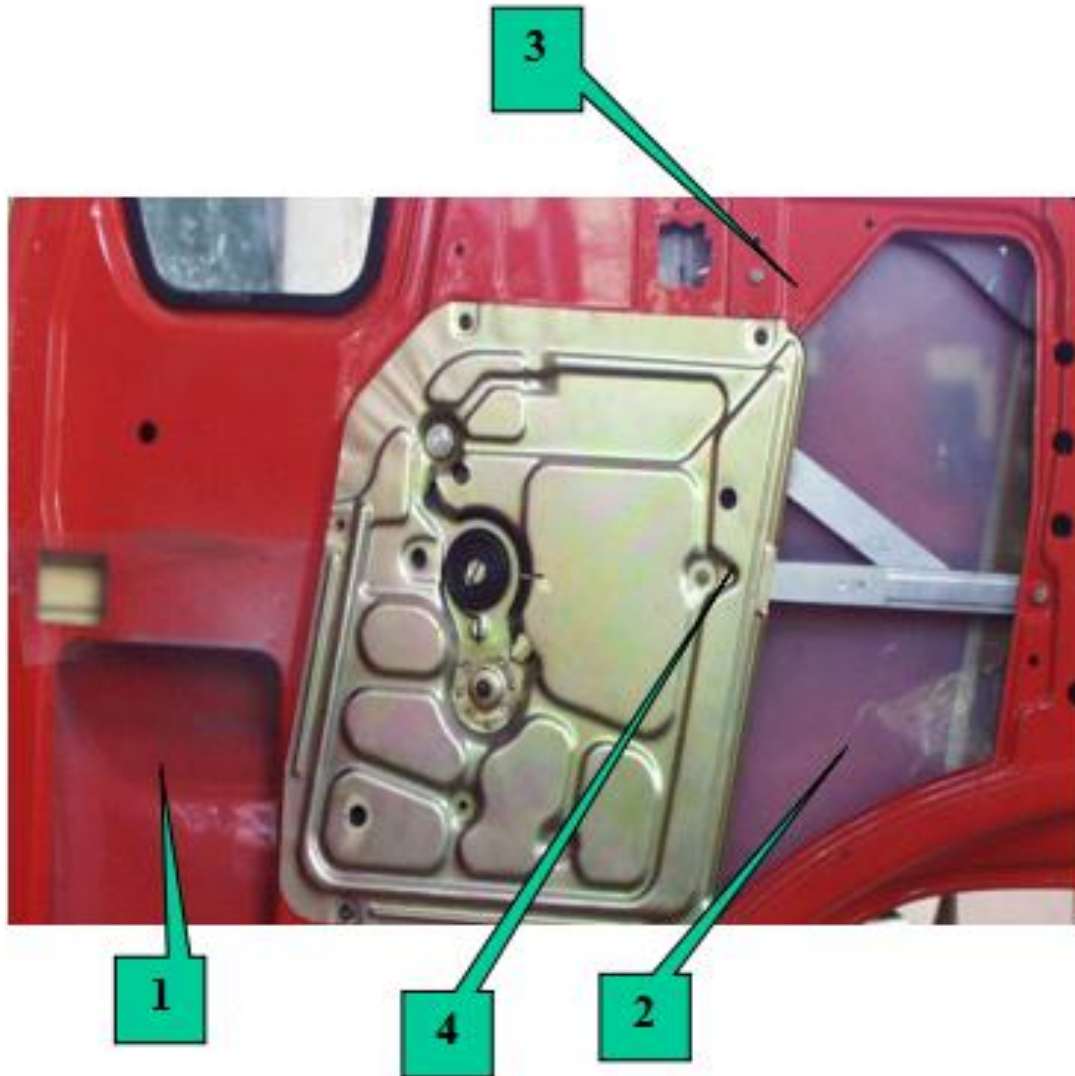

No	Parts number	Parts name	Quantity
1	AZ1642330051	film	2
2	AZ1642330019	Door protection	2
3	Q150B0612	bolt	2
4	Q2140610	Screw	4

1 Stick the film to the door and the lower part to the door cavity.

2 Place the door protection on the inside of the glass, let the roller pass through the trajectory opening, and paste the door protection layer onto the glass chute.

3 Shake the lifter into position and let the roller enter the glass bracket.

4 Set screws.